



TECHNICAL SPECIFICATION Envirotainer® container RKN t2



Internal dimensions

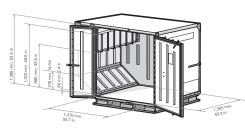

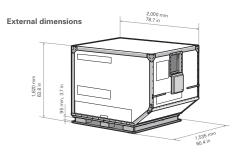

Contact information

It is easy to implement and work with an Envirotainer® solution. We offer a range of container types for convenient short and long term leasing from a worldwide network of stations. Please contact one of our three operations centers for container leases or visit www.envirotainer.com for more information

www.envirotainer.com

ENV1303 Envirotainer is a registered trademark of the company Envirotainer AB. All rights reserved.

ENVIROTAINER® CONTAINER RKN t2

Cooling system

Thermostat controlled heat exchanger powered by 16 D-size alkaline batteries and usingdry ice as coolant.

Max ice bunker capacity when using block ice* (Up to 50% less capacity if dry ice pellets are used)	180 kg 397 lbs
Cooling range** (desired temperature in the container)	-20 to +20 °C -4 to + 68 °F
Operating period without re-icing and battery change**	72 hr

Dimensions

External cube (volume)	4.8 m³ 169.6 cu.ft
External dimensions (L x W x H)	2000 x 1535 x 1620 mm (78.7 x 60.4 x 63.8)
Main loading space (please note free space requirements in front of the fan area – see Operations Manual for more information) (L x W x H)	1415 x 1355 x 1360 mm s (55.7 x 53.3 x 53.5 in)
Additional loading space (not right-angled) below dry ice bunker (L x W x H)	430 x 1355 x 860 mm (16.9 x 53.3 x 33.8 in)
Internal cube (volume) for refrigerated cargo	2.93 m ³ (103.4 cu.ft)

Weight	
Tare weight	265 kg (584 lbs)
Max gross weight (including dry ice)	1588 kg (3500 lbs)
Max net weight	1323 kg (2916 lbs)

Other information

Suitable for use on aircraft A300, A310, A330, A340, A380, B747, B767, B777, DC10, IL86, MD11, L1011

Forkliftable with a slot-height of 95 mm (3.7 in)

^{*} Dry ice amount may vary depending on wich type is used; blocks, pellets, wrapped/ unwrapped etc

^{**}Provided that ambient temperature is more than 5°C (9°F) and less than 25°C (45°F) higher than the temperature of the product shipped. To evaluate specific transportation times and conditions, please refer to the Operations Manual.