

Loading va-Q-lite 4 with va-Q-gel

For +5°C shipments

Step 1

Open the lid of the va-Q-lite 4 and remove the top cardboard tray.


Note:

Before loading, the va-Q-gel 00G and va-Q-gel +05G have to be preconditioned as per the respective SOP instructions for the desired temperature range.



Step 2

Place the product inside the provided inner cardboard and load it into the va-Q-lite 4.

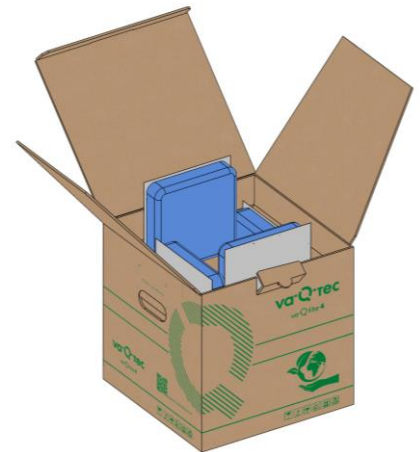

Step 3


Load 1 piece of va-Q-gel 19194 +05G on each side of va-Q-lite 4.



Step 4

Place 1 piece of va-Q-gel 48 00G on top of the product.

Flap left & right side

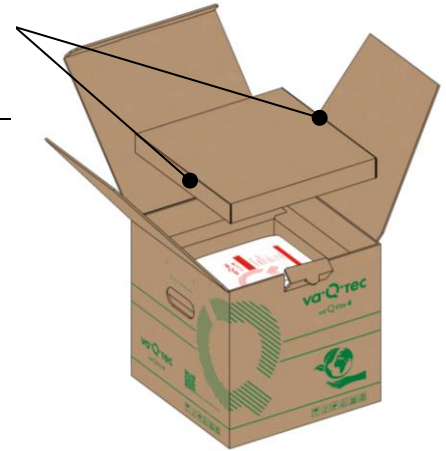

Step 5

Place the top cardboard tray on top of the cardboard ring. Orientation: The flaps of the cardboard tray must be placed on the left and right side of the va-Q-lite 4.

Note:

Make sure there is no gap between the cardboard ring and the top cardboard tray.



Step 6

Close the va-Q-lite 4 and use adhesive tape to seal the va-Q-lite 4.

