



TECHNICAL SPECIFICATION

Envirotainer[®] container RKN t2

Cooling system

Thermostat controlled heat exchanger powered by 16 D-size alkaline batteries and using dry ice as coolant.

| | |
|--|--------------------------------|
| Max ice bunker capacity when using block ice* (Up to 50% less capacity if dry ice pellets are used) | 180 kg 397 lbs |
| Cooling range** (desired temperature in the container) | -20 to +20 °C -4 to + 68 °F |
| Operating period without re-icing** | 72 hr |

Dimensions

| | |
|--|--|
| External cube (volume) | 4.8 m ³ 169.6 cu.ft |
| External dimensions (L x W x H) | 2000 x 1535 x 1620 mm 78.7 x 60.4 x 63.8 in |
| Main loading space (please note free space requirements in front of the fan area - see Operations Manual for more information) (L x W x H) | 1415 x 1355 x 1360 mm 55.7 x 53.3 x 53.5 in |
| Additional loading space (not right-angled) below dry ice bunker (L x W x H) | 430 x 1355 x 860 mm 16.9 x 53.3 x 33.8 in |
| Internal cube (volume) for refrigerated cargo | 2.93 m ³ 103.4 cu.ft |

Weight

| | |
|--------------------------------------|---------------------|
| Tare weight | 265 kg 584 lbs |
| Max gross weight (including dry ice) | 1588 kg 3500 lbs |
| Max net weight | 1323 kg 2916 lbs |

Other information


Suitable for use on aircraft A300, A310, A330, A340, B747, B767, B777, DC10, IL86, MD11, L1011

Forkliftable with a slot-height of 95 mm (3.7 in)


* Dry ice amount may vary depending on which type is used; blocks, pellets, wrapped/ unwrapped etc.

**Provided that ambient temperature is more than 5°C (9°F) and less than 25°C (45°F) higher than the temperature of the product shipped. To evaluate specific transportation times and conditions, please refer to the Operations Manual.

Internal dimensions

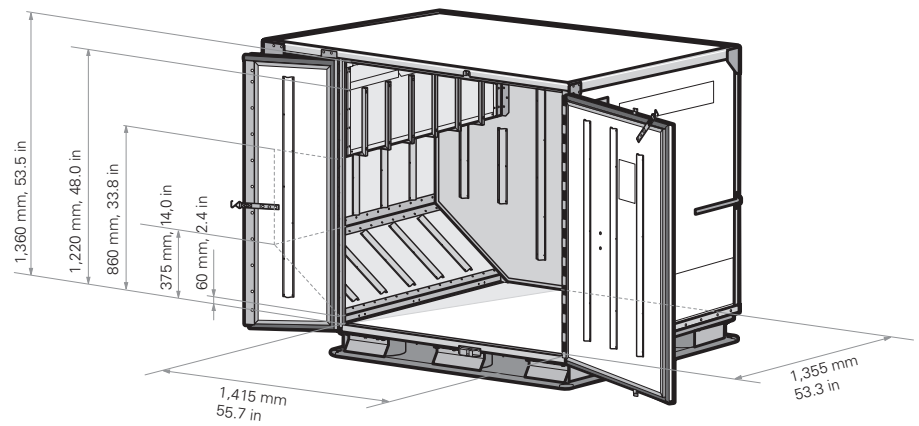

External dimensions

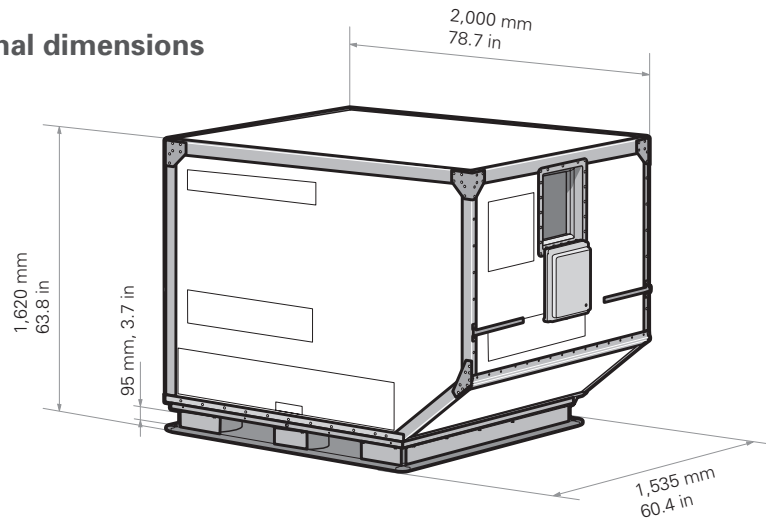

Contact information

It is easy to implement and work with an Envirotainer[®] solution. We offer a range of container types for convenient short and long term leasing from a worldwide network of stations. Please contact one of our two operations centers for container leases or visit www.envirotainer.com for more information.

Frankfurt Operations Center

Phone: +49 69 69 76 79 0
Fax: +49 69 69 76 79 27

Dallas Operations Center

Phone: +1 972 831 3800
Toll-free: +1 800 227 8298*
Fax: +1 972 831 3829
Toll-free: +1 866 290 9900*

* USA & Canada only

www.envirotainer.com

Envirotainer is a registered trademark of the company Envirotainer AB. All rights reserved.

Containers may diverge from the specifications indicated above. However, this will not affect the function of the container in question. The Buyer/Lessee is aware of this and may not raise any claims due to such divergencies.