




Illustration of OnePal US.

PRODUCT LOADING INSTRUCTIONS FOR ONEPAL US

Available to support commercial shipments of pharmaceuticals to remote areas, OnePal US is a 1 pallet sized solution, placed on a durable wooden pallet which is easily fork liftable from all four sides. The following document describes the product loading process for the OnePal US.


Step 1

- Remove the stretch foil and the marked straps to open the OnePal US. The door is marked with the words “Open this side”.

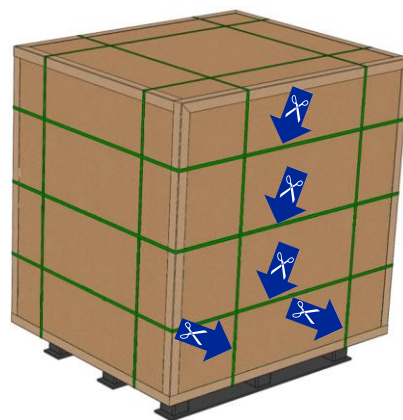


Step 2

- Open the door: Tilt the door at the upper side outwards, then lift it up and put it aside.

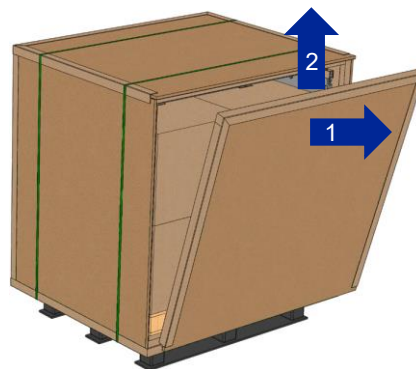


Step 3

- Load the product into the OnePal US. The use of a pallet when loading is necessary to guarantee the air circulation.

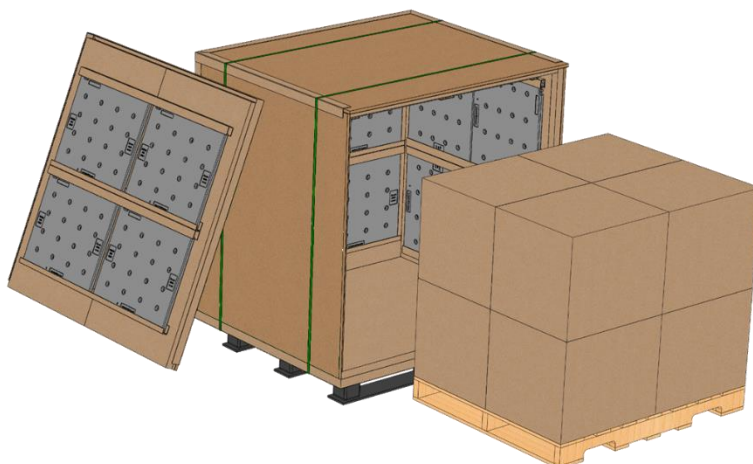


Step 4

- Close the door of the OnePal US. Therefore, take the wall and insert it into the edge protector of the base plate in a slightly tilted position. Close it and ensure all side walls fit into the edge protectors of the door.

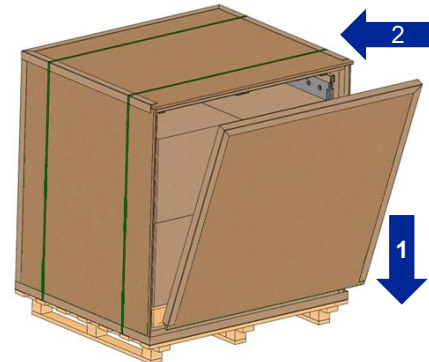

Step 5

- Strap the OnePal US like it is shown in the picture on the right. After strapping the OnePal US needs to be wrapped into stretch foil to protect it against moisture.

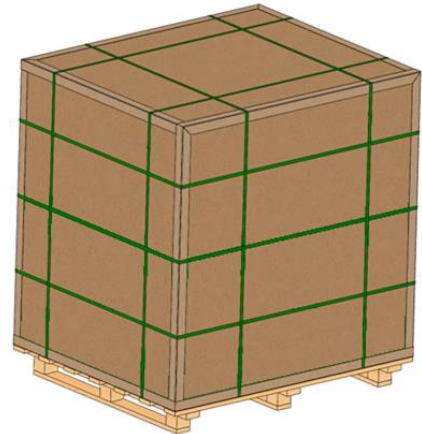

Handling recommendations

- Avoid dropping or applying excessive force on OnePal US.
- Use proper material handling equipment/industrial trucks only.
- Transport the OnePal US only when it's strapped.
- Check the OnePal US for external damages before shipping.
- Do not double stack.
- Store in a dry place.

For more information, please contact support@envirotainer.com