



Illustration of OnePal US.

DISASSEMBLING INSTRUCTIONS FOR ONEPAL US

Available to support commercial shipments of pharmaceuticals to remote areas, OnePal US is a 1 pallet sized solution, placed on a durable wooden pallet which is easily fork liftable from all four sides. The following document describes the disassembling for the OnePal US.


Step 1

- Remove the stretch foil and the marked straps to open the OnePal US. The door is marked with the words “Open this side”.




Step 2

- Open the door: Tilt the door at the upper side outwards, then lift it up and put it aside.

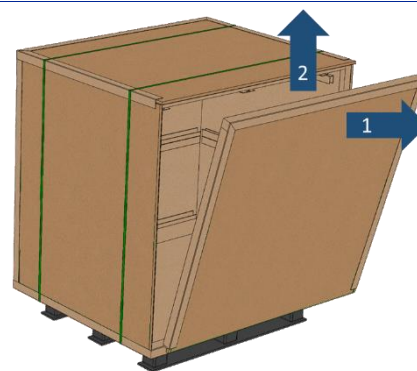


Step 3

- Unload the product.

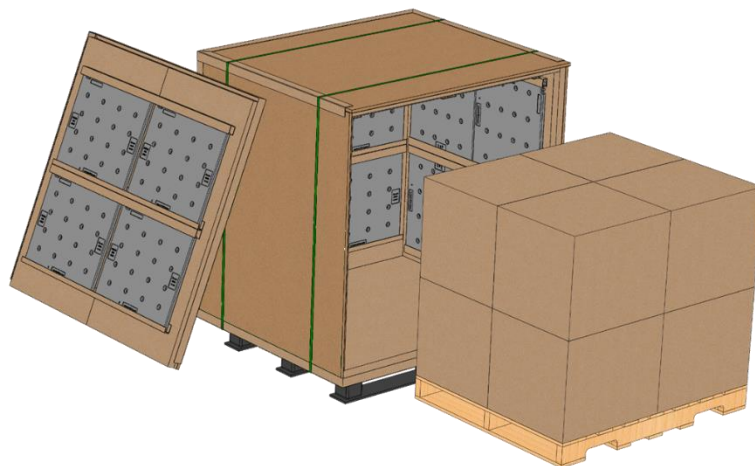


Step 4

- Remove the ProofBlok. The single steps are shown below.

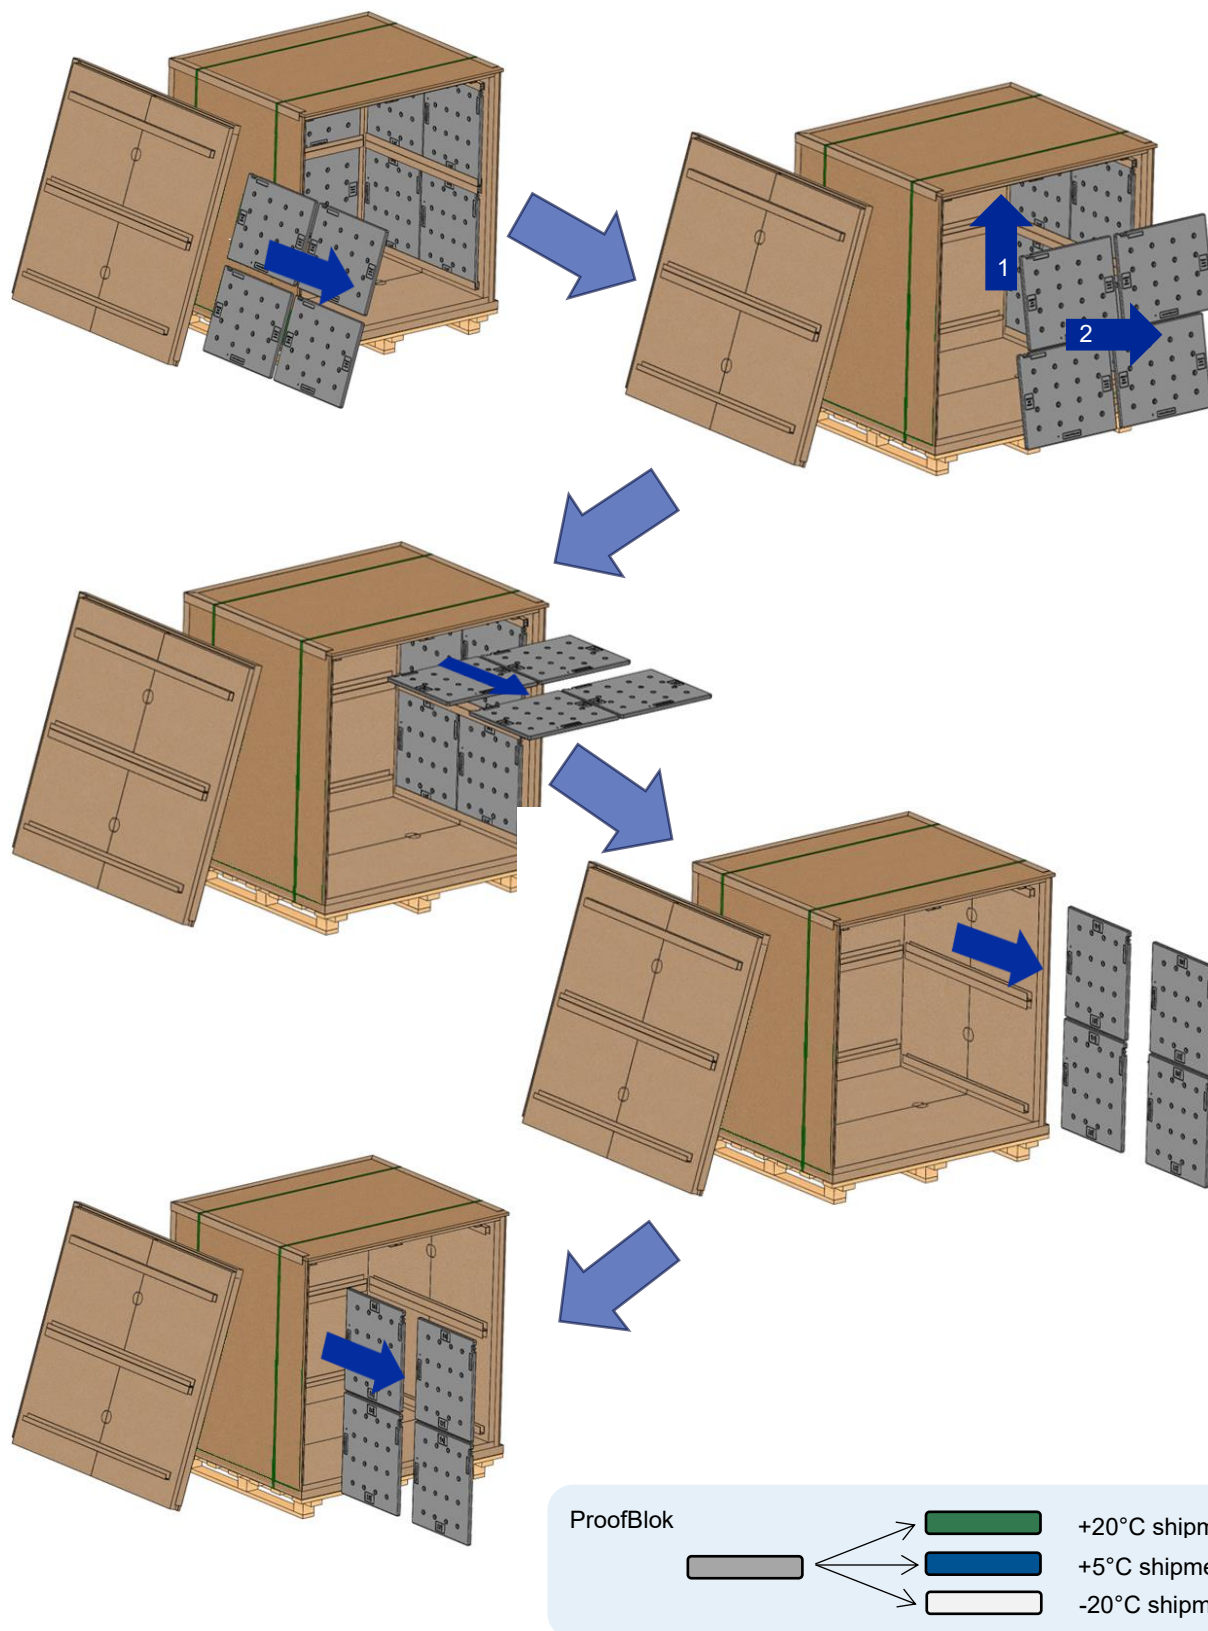

Step 5

- After the product and the ProofBlok®s are unloaded, the remaining two straps can be removed and the OnePal US can be disassembled. The single steps are shown below.

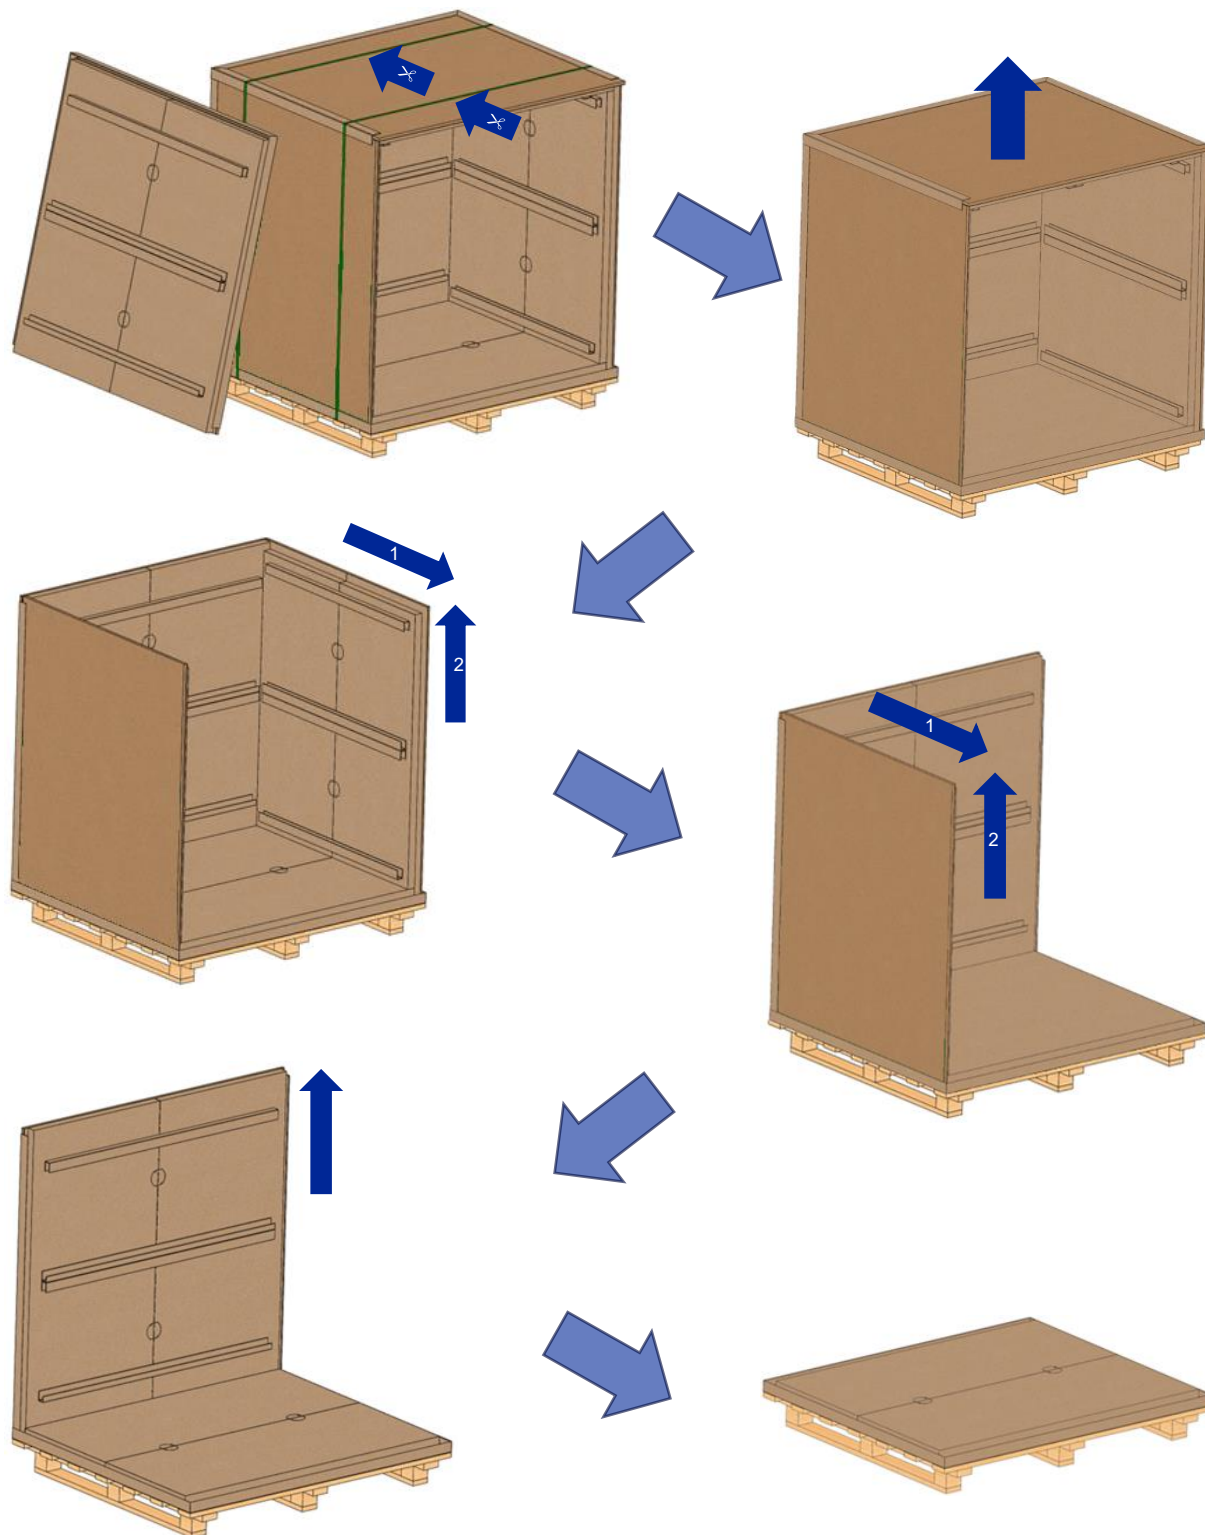

Note

For information regarding recycling, respectively disposal please refer to the recycling statement for OnePal US.
Safety data sheets for the single components are available upon request.

For more information, please contact support@envirotainer.com