



# TECHNICAL SPECIFICATION Envirotainer® container RAP t2





2,065 mm 81.3 in

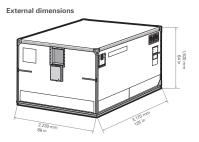

## **Contact information**

It is easy to implement and work with an Envirotainer® solution. We offer a range of container types for convenient short and long term leasing from a worldwide network of stations. Please contact one of our three operations centers for container leases or visit www.envirotainer.com for more information

### www.envirotainer.com

ENV1303 Envirotainer is a registered trademark of the company Envirotainer AB. All rights reserved.

# **ENVIROTAINER® CONTAINER RAP t2**

#### **Cooling system**

Thermostat controlled heat exchanger powered by 16 D-size alkaline batteries and using dry ice as coolant.

Max ice bunker capacity when using block ice*	300 kg
(Up to 50% less capacity if dry ice pellets are used)	660 lbs
Cooling range**	-20 to +20 °C
(desired temperature in the container)	-4 to + 68 °F

Operating period without re-icing and battery change\*\* 72 hr

## **Dimensions**

External cube (volume)	11.2 m³ 395.4 cu.ft
External dimensions (L x W x H)	3170 x 2230 x 1620 mm (125 x 88 x 64 in)
Main loading space (please note free space requirements in front of the fan area - see Operations Manual for more information) (L $\times$ W $\times$ H)	2535 x 2065 x 1420 mm (99.8 x 81.3 x 55.9 in)
Additional loading space under cooling unit $(L \times W \times H)$	460 x 2065 x 925 mm (18.1 x 81.3 x 36.4 in)
Internal cube (volume) for refrigerated cargo Weight	8.22 m³ (290.2 cu.ft)
Tare weight	450 kg (992 lbs)
Max gross weight	6033 kg (13300 lbs)
Max net weight	5583 kg (12308 lbs)
Other information	

Suitable for use on aircraft A300, A310, A330, A340, A380, B747, B767, B777, DC10, IL86, MD11, L1011

Forkliftable when empty

\* Dry ice amount may vary depending on which type is used; blocks, pellets, wrapped/unwrapped etc. \*\* Provided that ambient temperature is more than 5°C (9°F) and less than 25°C (45°F) higher than the temperature of the product shipped. To evaluate specifi c transportation times and conditions, please refer to the Operations Manual.